

Release Note

Software Release 2.6.4

For AT-8600, AT-8700XL, AT-8800, Rapier, and Rapier *i* Series Switches

Introduction	3
Upgrading to Software Release 2.6.4	3
Hardware Platforms	4
New platform - AT-8600 Series switch	4
Overview of New Features	5
NEBS Compliant Models	6
Importing BGP routes into OSPF	6
Enabling BGP route import	6
Limiting the number of routes	6
Advertising desired routes	7
Configuration example	7
SNMPv3	8
Stacking	8
What is Stacking?	8
Topologies	8
How Stacking Works	9
ICMP Router Discovery Advertisements	9
Router Discovery Process	9
Router Advertisement Messages	10
Router Solicitation Messages	10
Router Advertisement Interval	10
Preference Level	11
Lifetime	11
Configuration Procedure	11
Support for Long File Names (DOS 28.3)	12
Upgrading to new software releases	12
Regressing to previous software releases	13
Testing Asynchronous and Switch Ports	13
Interrupting Text Flow with the CLI	13
Disable 10/100 Ports at the Hardware Level	14
Specifying the Mode of Operation When IGMP Snooping is Enabled	14
IP Route Filter Changes to Protocol Parameter	15
Remote Security Officer (RSO) Login	16
Remote Security Officer Login and IPv4 Only	16
Remote Security Officer Login, IPv4 and IPv6	16
Enable IPV6 MLD Interface Command	17
Text Message at Login (Welcome banner)	17
Private VLANs	18

Membership Rules for Private VLANs	19
Private VLANs on Rapier 48i Switches	20
Configuring Private VLANs	20
Modified Commands	21
Configuration Example	22
Probing IP Addresses	23
Virtual Bridge (VLAN) MIB	24
Valid Values for IPv6 Router Advertisement <i>AdvRetransTimer</i>	25
Valid Characters for File Names - Show File and Delete File Commands	25
Extended Show Debug Command	26
Extended Syslog Format	28
TACACS+ Authentication and Telnet	29
Adopting the VRRP IP Address	30
Benefits of VRRP IP Address Adoption	30
Risks of VRRP IP Address Adoption	30
Recommendations	30
Configuration of VR IP Address Adoption	31
BCP Option 8	32
Firewall Enhancements	32
ICMP protocol for firewall policy rule	32
Debug and display firewall ARP requests	32

Introduction

Allied Telesyn announces the release of Software Release 2.6.4 for the AT-8600, AT-8700XL, AT-8800, Rapier, and Rapier *i* Series switches. To see which new features and enhancements apply to each product type, see *Overview of New Features on page 5*.

This Release Note describes:

- important factors you need to consider when upgrading to Software Release 2.6.4 from an earlier software release, in *Upgrading to Software Release 2.6.4 on page 3*
- the names of the software release, GUI and help files for this release, in *Upgrading to Software Release 2.6.4 on page 3*
- the new and existing hardware platforms supported by Software Release 2.6.4
- the new features in Software Release 2.6.4 since Software Release 2.6.1

This Release Note should be read in conjunction with the Quick Install Guide, User Guide, Hardware Reference, and Software Reference for your switch. These documents can be found on the Documentation and Tools CD-ROM packaged with your switch, or at:

www.alliedtelesyn.co.nz/documentation/documentation.html



WARNING: Information in this Release Note is subject to change without notice and does not represent a commitment on the part of Allied Telesyn International. While every effort has been made to ensure that the information contained within this document and the features and changes described are accurate, Allied Telesyn International can not accept any type of liability for errors in, or omissions arising from the use of this information.

Upgrading to Software Release 2.6.4

Software Release 2.6.4 is available as a flash release that can be downloaded directly from the Software Updates area of the Allied Telesyn web site at: www.alliedtelesyn.co.nz/support/updates/patches.html

Software releases must be licenced and require a password to activate. To obtain a licence and password, contact your authorised Allied Telesyn distributor or reseller.

The files included in this software release are shown in Table 1.

Table 1: File names for Software Release 2.6.4

Product name	Software release file	GUI resource file	CLI help file
AT-8624T/2M	sr-264.rez	dsr24e10.rsc	SR-264A.HLP
AT-8724XL	87-264.rez	d8724e04.rsc	8700264A.HLP
AT-8748XL	87-264.rez	d8748e04.rsc	8700264A.HLP
AT-8824	86s-264.rez	d8824e10.rsc	8800264A.HLP

Table 1: File names for Software Release 2.6.4 (Continued)

Product name	Software release file	GUI resource file	CLI help file
AT-8848	86s-264.rez	d8848e04.rsc	8800264A.HLP
Rapier G6	86s-264.rez	d_rg6e04.rsc	RP-264A.HLP
Rapier G6F	86s-264.rez	drg6fe04.rsc	RP-264A.HLP
Rapier 16F	86s-264.rez	dr16fe04.rsc	RP-264A.HLP
Rapier 16 <i>i</i>	86s-264.rez	dr16ie04.rsc	RP-264A.HLP
Rapier 24	86s-264.rez	d_r24e04.rsc	RP-264A.HLP
Rapier 24 <i>i</i>	86s-264.rez	dr24ie04.rsc	RP-264A.HLP
Rapier 48	86s-264.rez	d_r48e04.rsc	RP-264A.HLP
Rapier 48 <i>i</i>	86s-264.rez	dr48ie04.rsc	RP-264A.HLP
AT-RP24i/DS3	86s-264.rez	dr24ie04.rsc	RP-264A.HLP

Hardware Platforms

Software Release 2.6.4 supports the following existing hardware platforms:

- AT-8700XL Series switches
- AT-8800 Series switches
- Rapier Series switches
- Rapier *i* Series switches

New platform - AT-8600 Series switch


Allied Telesyn announces the AT-8600 Series Advanced Fast Ethernet Switches. These switches are available in 2004 with Software Release 2.6.4. There is currently one model in the AT-8600 Series:

- AT-8624T/2M has 24 ports with 10BASE-T/100BASE-TX RJ-45 connectors (see Figure 1).

This switch:

- has 2 expansion module bays.
- includes the AlliedWare features available in Software Release 2.6.4. For details, see Table 2 on page 5.

Figure 1: Front and rear panels of the AT-8624T/2M

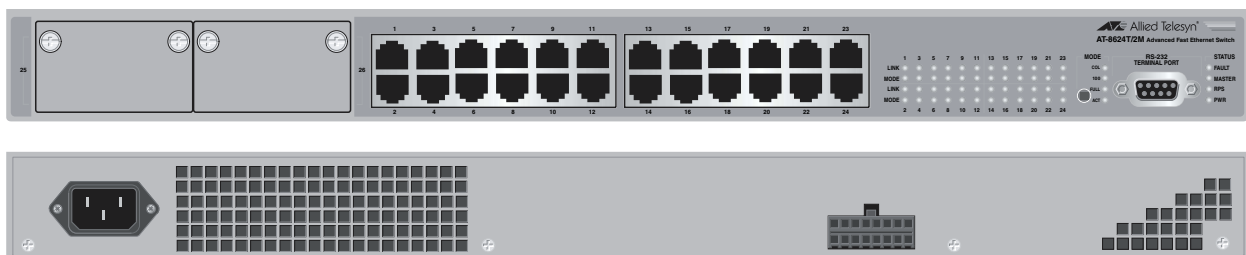

Contact your authorised distributor or reseller for ordering information.

Overview of New Features

Table 2 summarises the new features and enhancements in Software Release 2.6.4 by product series. Each new feature and enhancement is described in the following sections.



Stacking was first released in Software Release 2.6.2, and SNMPv3 was first released in Software Release 2.6.3 on AT-8700XL, AT-8800, Rapiet, and Rapiet i Series switches. Both features are now available on AT-8600 Series switches.

Table 2: New features and enhancements in Software Release 2.6.4 by product series

	AT-8600	AT-8700XL	AT-8800	RAPIER	RAPIER i
NEBS Compliant Models		✓			✓
Importing BGP routes into OSPF	✓	✓	✓	✓	✓
SNMPv3	✓	✓	✓	✓	✓
Stacking	✓	✓	✓	✓	✓
ICMP Router Discovery Advertisements	✓	✓	✓	✓	✓
Support for Long File Names (DOS 28.3)	✓	✓	✓	✓	✓
Testing Asynchronous and Switch Ports	✓	✓	✓	✓	✓
Interrupting Text Flow with the CLI	✓	✓	✓	✓	✓
Disable 10/100 Ports at the Hardware Level	✓	✓	✓	✓	✓
Specifying the Mode of Operation When IGMP Snooping is Enabled	✓	✓	✓	✓	✓
IP Route Filter Changes to Protocol Parameter	✓	✓	✓	✓	✓
Remote Security Officer (RSO) Login	✓	✓	✓	✓	✓
Enable IPV6 MLD Interface Command			✓	✓	✓
Text Message at Login (Welcome banner)	✓	✓	✓	✓	✓
Private VLANs			✓		✓
Probing IP Addresses	✓	✓	✓	✓	✓
Virtual Bridge (VLAN) MIB	✓	✓	✓	✓	✓
Valid Values for IPv6 Router Advertisement AdvRetransTimer			✓	✓	✓
Valid Characters for File Names - Show File and Delete File Commands	✓	✓	✓	✓	✓
Extended Show Debug Command	✓	✓	✓	✓	✓
Extended Syslog Format	✓	✓	✓	✓	✓
TACACS+ Authentication and Telnet	✓	✓	✓	✓	✓
Adopting the VRRP IP Address	✓	✓	✓	✓	✓

Table 2: New features and enhancements in Software Release 2.6.4 by product series (Continued)

	AT-8600	AT-8700XL	AT-8800	RAPIER	RAPIER /
BCP Option 8				✓	✓
Firewall Enhancements			✓	✓	✓

NEBS Compliant Models

Software Release 2.6.4 adds support for the following two new Network Equipment Building Systems (NEBS) compliant Layer 3 switch models:

- Rapier 24i (NEBS compliant)
- AT-8724XL (NEBS compliant)

Contact your authorised distributor or reseller for ordering information.

Importing BGP routes into OSPF

With this enhancement you can import routes from BGP into OSPF. OSPF will then redistribute these routes. This enhancement adds three parameters to the **set ospf** command, and modifies the output of the **show ospf** command. The new parameters are **bgpimport**, **bgpfilter** and **bgplimit**.

BGP can learn thousands of routes, so it's important to consider the network impact of importing these routes. Routing devices in the OSPF domain may become overloaded if they store too many routes. You can prevent this by limiting the number of routes that will be imported.



Do not enable the importing of BGP routes into OSPF unless you are sure about the consequences for the OSPF domain.

Enabling BGP route import

To enable importing BGP routes into OSPF, use the command:

```
set ospf bgpimport=on
```

Limiting the number of routes

There are two ways to limit the number of BGP routes imported into OSPF. One way is to specify a maximum number of routes with the command:

```
set ospf bgplimit=1...300
```

When the limit is reached, the importing of routes will stop until existing routes are removed. Because they are BGP routes, actions of BGP control when the routes disappear.

The other way to limit the imported routes is to configure a routing filter. This filter is used in conjunction with the **bgpfilter** parameter in the **set ospf** command to control the passing of routing information in and out of the device. To configure a filter, use the **add ip filter** command:

```
add ip filter=filter-number {action=include|exclude}
    source=ipadd [smask=ipadd] [entry=entry-number]
```

Use this filter to limit imported BGP routes with the command:

```
set ospf bgpfilter=300...399
```

where the filter number is the previously configured filter.

Take care when configuring the IP filter. If the number of imported routes reaches the **bgplimit** parameter, you may not have imported all the routes specified with the **bgpfilter** parameter.

Advertising desired routes

The order in which routes are added is arbitrary. This means that to have desired BGP routes advertised by OSPF, you must take care setting the **entry** number for the route filter with the **add ip route** command. Assign a low entry number to a filter used to import preferred BGP routes. Alternatively, set the **bgplimit** parameter above the total number of routes that BGP will ever add to the routing table.

Configuration example

This example supposes that you want to import the route 192.168.72.0 into the OSPF routing domain, but no other routes. This route is received on the gateway router as a BGP route. The following steps show the sequence of commands to use in this scenario.

1. Set up the IP filter:

```
add ip filter=300 source=192.168.72.0 smask=255.255.255.255
    action=include
```

2. Set up OSPF BGP import parameters:

```
set ospf bgpimport=on bgpfilter=300 bgplimit=1
```

3. Check that BGP has added the route to the IP route table:

```
show ip route=192.168.72.0
```

The route should be visible in the output of the command.

4. Check that OSPF has imported the route:

```
show ospf lsa=192.168.72.0
```

The output should show that there is an AS external LSA with this ID.

SNMPv3

SNMPv3 provides enhanced security management features whilst maintaining compatibility with earlier versions SNMPv1 and SNMPv2. The basic additional features of version 3 are:

- Message Authentication:
- Hashing and time stamping is employed to ensure that messages are received from valid sources.
- Message Confidentiality
- Encryption can be applied to messages to ensure content privacy.
- Compatibility with previous versions SNMPv1 and SNMPv2

For more information, see the *SNMP* chapter in the *Software Reference*.

Stacking

Stacking affords the following advantages when managing a group of switches:

- Because stack members are connected by open standard Ethernet or uplink switch ports, the switches can be at the same physical location or across geographical areas.
- Management interfaces are conserved because each stack is managed from a single IP address or terminal connection.
- Because a stack has one configuration file that is simple to maintain for all member switches, it efficiently manages individual switches. Stacks are easy to reconfigure in tune with changing network needs.
- Stacks offer an alternative to managing a group of switches by using a CLI or GUI on each switch, which is often tedious and time-consuming.

What is Stacking?

Stacking is a way to synchronise information across multiple switches and manage them as one logical device. Stacking uses a proprietary protocol to manage a group of separate switches as one.

When several switches perform similar functions, you can manage them as one. For ease and simplicity, a stack can be managed from any stack member.

Topologies

A **stack** consists of a maximum of nine switches connected by switch ports in the same Stacking VLAN. Stack members must be on the same LAN; however, they can be in different physical locations. No extra hardware is required because stack members use open standards interfaces. This allows flexible topologies; typical ones are ring and star.

How Stacking Works

The Stacking feature centralises management by distributing and maintaining system-wide information about stack members. It also:

- Synchronises and propagates information about individual stack members
- Propagates CLI and GUI commands
- Manages responses and acknowledgements
- Synchronises the stack configuration file

Switches have individual **host IDs**, which you set, so that they know which device they are in the stack. Stacks have unique **stack IDs**, which you also set, so that switches know to which stack they belong. Stack IDs are essential when you have multiple stacks.

Stacked switches communicate with each other over a **Stacking interface**, which is a user-defined virtual interface such as a VLAN. Ports in the Stacking VLAN should be added as tagged VLAN ports to data VLANs. This ensures that the Stacking VLAN carries user data.

For more information, see the *Stacking* chapter in the *Software Reference*.

ICMP Router Discovery Advertisements

This release supports all of *RFC 1256, ICMP Router Discovery Messages, 1991* as it applies to routers. If this feature is configured, the switch sends router advertisements periodically and in response to router solicitations. It does not support the Host Specification section of this RFC.

Before an IP host can send an IP packet, it has to know the IP address of a neighbouring router that can forward it to its destination. ICMP Router Discovery messages allow routers to automatically advertise themselves to hosts. Other methods either require someone to manually keep these addresses up to date, or require DHCP to send the router address, or require the hosts to be able to eavesdrop on whatever routing protocol messages are being used on the LAN.

Router Discovery Process

For a summary of the processes that occur when Router Discovery advertisements are enabled for interfaces on the switch see Table 3 on page 9

Table 3: Router Discovery Process

When ...	Then ...
Router Discovery advertising starts on a switch interface because: <ul style="list-style-type: none"> - the switch starts up, or - advertisements are enabled on the switch or on an interface 	the switch multicasts a router advertisement and continues to multicast them periodically until router advertising is disabled.
a host starts up	the host may send a router solicitation message.

Table 3: Router Discovery Process (Continued)

When ...	Then ...
the switch receives a router solicitation	the switch multicasts an early router advertisement on the multicast interface on which it received the router solicitation.
a host receives a router advertisement	the host stores the IP address and preference level for the advertisement lifetime.
the lifetime of all existing router advertisements on a host expires	the host sends a router solicitation.
a host does not receive a router advertisement after sending a small number of router solicitations	the host waits for the next unsolicited router advertisement
a host needs a default router address	the host uses the IP address of the router or L3 switch with the highest preference level.
Router Discovery advertising is deleted from the physical interface (delete ip advertise command), or the logical interface has advertise set to no (set ip interface command)	the switch multicasts a router advertisement with the IP address(es) that stopped advertising, and a lifetime of zero (0). It continues to periodically multicast router advertisements for other interfaces.
the switch receives a router advertisement from another router	the switch does nothing but silently discards the message.

Router Advertisement Messages

A *router advertisement* is an ICMP (type 10) message containing:

- In the destination address field of the IP header, the interface's configured advertisement address, either 224.0.0.1 (ALL) or 255.255.255.255 (LIMITED).
- In the lifetime field, the interface's configured advertisement lifetime.
- In the Router Address and Preference Level fields, the addresses and preference levels of all the logical interfaces that are set to advertise.

Router Solicitation Messages

A *router solicitation* is an ICMP (type 10) message containing:

- Source Address: an IP address belonging to the interface from which the message is sent
- Destination Address: the configured Solicitation Address, and
- Time-to-Live: 1 if the Destination Address is an IP multicast address; at least 1 otherwise.

Router Advertisement Interval

The router advertisement *interval* is the time between router advertisements. For the first few advertisements sent from an interface (up to 3), the switch sends the router advertisements at intervals of at most 16 seconds. After these initial transmissions, it sends router advertisements at random intervals between the minimum and maximum intervals that the user configures, to reduce the probability of synchronization with the advertisements from other routers on the same link. By default the minimum is 450 seconds (7.5 minutes), and the maximum is 600 seconds (10 minutes).

Preference Level

The *preference level* is the preference of the advertised address as a default router address relative to other router addresses on the same subnet. By default, all routers and layer 3 switches have the same preference level, zero (0). While it is entered as a decimal in the range -2147483648..2147483647, it is encoded in router advertisements as a twos-complement hex integer in the range 0x8000000 to 0x7fffffff. A higher **preferencelevel** is preferred over a lower value.

Lifetime

The *lifetime* of a router advertisement is how long the information in the advertisement is valid. By default, the lifetime of all advertisements is 1800 seconds (30 minutes).

Configuration Procedure

By default, the switch does not send router advertisements.

To configure the router to send router advertisements:

1. Set the physical interface to advertise.

For each physical interface that is to send advertisements, add the interface. In most cases the default advertising parameters will work well, but you can change them if required. By default, the switch sends router advertisements every 7.5 to 10 minutes, with a lifetime of 30 minutes. These settings are likely to work well in most situations, and will not cause a large amount of extra traffic, even if there are several routers on the LAN. If you change these settings, keep these proportions:

```
lifetime=3 x maxadvertisementinterval
minadvertisementinterval=0.75 x maxadvertisementinterval
```

To change these settings, use one of the commands:

```
add ip advertise interface=interface
[advertisementaddress={all|limited}]
[maxadvertisementinterval=4..1800]
[minadvertisementinterval=3..maxadvertisementinterval]
[lifetime=maxadvertisementinterval..9000]

set ip advertise interface=interface
[advertisementaddress={all|limited}]
[maxadvertisementinterval=4..1800]
[minadvertisementinterval=3..maxadvertisementinterval]
[lifetime=maxadvertisementinterval..9000]
```

2. Stop advertising on other logical interfaces.

By default, logical interfaces are set to advertise if their physical interface is set to advertise. If the physical interface has more than one logical interface (IP multihoming), and you only want some of them to advertise, set the other logical interfaces not to advertise, using one of the commands:

```
add ip interface=interface ipaddress={ipadd|dhcp}
advertise=no [other-parameters...]

set ip interface=interface advertise=no
[other-parameters...]
```

3. Set preference levels.

By default, every logical interface has the same preference for becoming a default router (mid range, 0). To give a logical interface a higher preference, increase the **preferencelevel**. To give it a lower preference, decrease this value. If it should never be used as a default router, set it to **notdefault**.

```
add ip interface=interface ipaddress={ipadd|dhcp}
    preferencelevel={-2147483648..2147483647|notdefault}
    [other-parameters...]

set ip interface=interface
    [preferencelevel={-2147483648..2147483647|notdefault}]
    [other-parameters...]
```

4. Enable advertising.

Enable router advertisements on all configured advertising interfaces, using the command:

```
enable ip advertise
```

5. Check advertise settings.

To check the router advertisement settings, use the command:

```
show ip advertise
```

For full descriptions of these commands, see the *Internet Protocol (IP)* chapter of the *Software Reference*.

Support for Long File Names (DOS 28.3)

File names of up to twenty eight characters long and extensions of three characters (DOS 28.3 format) are now supported.

All software releases support short filenames (DOS 8.3 format). Software release 2.5.1 and later support long file names in either DOS 16.3 or DOS 28.3 format. The table below summarises which software releases support different DOS filename formats.

Table 4: The DOS filename formats supported by different software releases

Software release	Dos 8.3 format	DOS 16.3 format	DOS 28.3 format
2.4.x and earlier	Yes	No	No
2.5.1 and later	Yes	Yes	No
2.6.4 and later	Yes	Yes	Yes

Upgrading to new software releases

When upgrading to software release 2.6.4 from any previous software release file names retain their DOS naming format. DOS 8.3 format filenames remain in DOS 8.3 format and DOS 16.3 format filenames remain in DOS 16.3 format.

Regressing to previous software releases

If software release 2.6.4 is installed on the switch and then a previous software release that supports **only** DOS 8.3 format is installed (see Table 4), long file names that were in DOS 28.3 format are truncated to DOS 8.3 format. When software release 2.6.4 or later is reinstalled, these truncated file names are restored to their DOS 28.3 format and no information is lost. Support for long file names in only DOS 8.3 format is a feature of software releases prior to software release 2.5.1.

If software release 2.6.4 is installed on the switch and then a previous software release that supports DOS 16.3 format is installed (see Table 4), long file names in DOS 28.3 format are permanently truncated to DOS 8.3 format. For example, the file `AB12345678.SCP` is permanently renamed `AB123~01.SCP`. Any long file names that were in DOS 28.3 format remain truncated in DOS 8.3 format when software release 2.6.4 is reinstalled. Support for long file names in DOS 16.3 format is a feature of software release 2.5.1 up to software release 2.6.4.

For more information, see the *Operations* chapter of the *Software Reference*.

Testing Asynchronous and Switch Ports

For the **enable test interface** and **disable test interface** commands, the **interface** parameter has been expanded. As well as the existing testable interfaces, you can now test the following interfaces on all products with switch ports:

- asyn port *n*, using **interface=asynn** (for example, **interface=asyn0**)
- switch port *n*, using **interface=portn** (for example, **interface=port8**)



This functionality is already available on AR400 series routers.

For more information, see the *Test Facility* chapter of the *Software Reference*.

Interrupting Text Flow with the CLI

A new function has been added for users of the Command Line Interface (CLI) to let them interrupt (or “break”) text paging or continuously streaming text. The key combination is Ctrl-Q.

This capability will be useful with stand alone commands such as **show** commands that display many output screens. The text is buffered and undisplayed text is deleted. The command prompt is then restored.

The paging prompt will continue giving users the option to display the next line of text output or next page, print text continuously with no further prompts, or abort text output.

This functionality will not work on commands that produce output of indeterminate length, such as **enable** and **disable** commands where output starts with *enable* and stops with *disable*.

For more information, see the *Operations* chapter of the *Software Reference*.

Disable 10/100 Ports at the Hardware Level

When disabling a port or group of ports on the switch, you can now specify that 10/100 Ethernet ports are disabled at the hardware level, using the command:

```
disable switch port={port-list|all} [link={enable|disable}]
[other-parameters...]
```

The **link** parameter specifies whether 10/100 Ethernet ports are either enabled or disabled at the hardware level. If **disable** is specified, this is the equivalent of disconnecting the cable. If the **link** parameter is not specified, the link remains physically enabled. The default is **enable**.

If a port has been disabled at the hardware level, when it is reset it is enabled at the hardware level and autonegotiation of speed and duplex mode is activated.

For more information, see the *Switching* chapter of the *Software Reference*.

Specifying the Mode of Operation When IGMP Snooping is Enabled

You can now specify the mode of operation when IGMP Snooping is enabled with the command:

```
set igmpsnooping routermode=[all|default|ip|multicastrouter|
none]
```

If **all** is specified, all reserved multicast addresses (i.e. 224.0.0.1 to 224.0.0.255) are treated as router multicast addresses.

If **default** is specified, the following addresses are treated as router multicast addresses:

- IGMP Query, 224.0.0.1
- All routers on this subnet, 224.0.0.2
- DVMRP Routers, 224.0.0.4
- OSPFIGP all routers, 224.0.0.5
- OSPFIGP designated routers, 224.0.0.6
- RIP2 routers, 224.0.0.9
- All PIM routers, 224.0.0.13
- All CBT routers, 224.0.0.15

If **ip** is specified, you specify addresses treated as router multicast addresses using the **add igmpsnooping routeraddress** and the **delete igmpsnooping routeraddress** commands. When in this mode, your switch retains previous addresses that have already been specified.

If **multicastrouter** is specified, the following addresses are treated as router multicast addresses:

- DVMRP Routers, 224.0.0.4
- All PIM routers, 224.0.0.13

If **none** is specified, the switch does not create router ports at all.

To add and delete reserved IP multicast addresses to and from the list of router multicast addresses specified by the **set igmpsnooping routermode** command when the **ip** parameter is selected, use the commands:

```
add igmpsnooping routeraddress
delete igmpsnooping routeraddress
```

The IP addresses specified must be from 224.0.0.1 to 224.0.0.255.

To display information about the current list of configured IP multicast router addresses configured on your switch, use the command:

```
show igmpsnooping routeraddress
```

For more information about IGMP Snooping, see the *IP Multicasting* chapter of the *Software Reference*.

IP Route Filter Changes to Protocol Parameter

IP routing filters affect the interaction between routing protocols, such as RIP and OSPF, and the IP route table. Route filters control which routes received by routing protocols are added to the IP route table, and which routes in the route table can be advertised by routing protocols.

IP routing filters can no longer be applied to static routes and interface routes. The list of options accepted by the **protocol** parameter in the **add ip route filter** and **set ip route filter** commands has been modified. The new syntax is:

```
add ip route filter[=filter-id] ip=ipadd mask=ipadd
  action={include|exclude} [direction={receive|send|both}]
  [interface=interface] [nexthop=ipadd] [policy=0..7]
  [protocol={any|egp|ospf|rip}]

set ip route filter=filter-id [ip=ipadd] [mask=ipadd]
  [action={include|exclude}] [direction={receive|send|
  both}] [interface=interface] [nexthop=ipadd] [policy=0..7]
  [protocol={any|egp|ospf|rip}]
```

For more information about static routes and interface routes, see the *Internet Protocol (IP)* chapter of the *Software Reference*.

Remote Security Officer (RSO) Login

There are two sections to this enhancement. The first section applies to switches that support Remote Security Officer (RSO) and IPv4 only. The second section applies to switches and routers that support RSO, IPv4, and IPv6.

Remote Security Officer Login and IPv4 Only

This section applies to the AT-8600, AT-8700XL, AT-8800, Rapier, and Rapier *i* Series switches.

The Remote Security Officer (RSO) feature lets a remote user connect to a switch via Telnet from an authorized IP address, and login using a name with Security Officer privilege as if the user were at a terminal connected directly to the switch. The RSO feature is configured by defining authorized IP addresses using the ADD USER RSO and DELETE USER RSO commands. These commands now accept ranges of IP addresses:

```
add user rso ip=ipadd [mask=ipadd]  
add user rso ip=ipadd[-ipadd]  
delete user rso ip=ipadd[-ipadd]
```

where *ipadd* is an IP address in dotted decimal notation. If a mask is not specified, the default is 255.255.255.255.

Remote Security Officer Login, IPv4 and IPv6

This section only applies to the AT-8800, Rapier, and Rapier *i* Series switches.

IPv6 addresses are now also supported, enabling Remote Security Officers to login over an IPv6 network:

```
add user rso ip=ipv6add[/prefix-length]  
add user rso ip=ipv6add[-ipv6add]  
delete user rso ip=ipv6add/prefix-length  
delete user rso ip=ipv6add[-ipv6add]
```

where *ipv6add* is an IPv6 address. If a prefix length is not specified, the default is 128.

For more information about Remote Security Officer, see the *Operations* chapter of the *Software Reference*.

Enable IPV6 MLD Interface Command



This enhancement is available on AT-8800, Rapier, and Rapier i Series switches.

This command lets users enable the Multicast Listener Discovery (MLD) protocol on an interface that already exists. For Release 2.6.4, the **v1compatible** parameter for the command has been replaced with the **queryversion** parameter. The new syntax is:

```
enable ipv6 mld interface=interface [queryversion={1|2}]
```

where *interface* is a valid interface

Queryversion specifies the version of MLD Query to us on the interface. It is a more accurate way to specify interoperability between MLDv2 and MLDv1. The default is 2.

To avoid unnecessary error messages, we recommend that users replace **v1compatible** with **queryversion** along with their related values in scripts currently being used. For more information about Multicast Listener Discovery, see the *IPv6 Multicasting* chapter of the *Software Reference*.

Text Message at Login (Welcome banner)

Before users get the prompt that lets them log in, contents from a file named *login.txt* is displayed if it exists in flash memory. The *login.txt* file lets various kinds of messages be sent to users. The following diagram is an example of output from the *login.txt* file for the AT-8700, AT-8800, Rapier, and Rapier *i* series switches.

```
INFO: Self tests beginning.
INFO: RAM test beginning.
PASS: RAM test, 65536k bytes found.
INFO: BBR tests beginning.
.....
.....
INFO: Switch startup complete

Warning: This equipment is for authorised persons only. If you
do not have proper clearance, please logout now.

Login:
```

The following diagram is an example of output from the *login.txt* file for the AT-8600 series switch.

```

INFO: Self tests beginning.
INFO: RAM test beginning.
PASS: RAM test, 65536k bytes found.
.....
.....
INFO: Switch startup complete

Warning: This equipment is for authorised persons only. If you
do not have proper clearance, please logout now.

Login:

```

Users with Manager privileges or higher create the file named *login.txt* by using the **edit** command or by loading an existing text file. The contents of the file must be in printable ASCII characters but with no control characters. When no *login.txt* file exists, the login prompt is displayed without a message.

For more information to help create a *login.txt* file, see the **edit** command and the **load** command in the *Software Reference*.

After someone with User privileges successfully logs in, the switch activates an auto-executing file, *autoexec.scp*, if one is in flash memory. Users with Manager privileges or higher also create these script files. For more information about scripts, see the *Scripting* chapter of the *Software Reference*.

Private VLANs



Private VLANs are available on AT-8800 and Rapier i Series switches.

A private VLAN contains switch ports that are isolated from other ports in the VLAN, but can access another network through an uplink port or uplink trunk group. These ports are called *private ports*. Private ports may be stand alone or be combined into groups. Stand alone private ports can only communicate with the uplink port, not with other ports in the VLAN. Private ports that are in a group can communicate with other ports in the group and with the uplink port, but cannot communicate with the other private ports in the VLAN.

The switch forwards traffic between private ports and the uplink port, and between private ports within a group, according to its normal forwarding rules. The only difference is that forwarding to other private ports is blocked unless the ports are in the same group. Note that all traffic between private ports is blocked, not only Layer 2 traffic.

A typical application is a hotel installation where each room has a port that can access the Internet. In this situation it is undesirable to allow communication between rooms. Another application is to simplify IP address assignment. Ports can be isolated from each other while belonging to the same subnet.


Figure 2 on page 19 shows an example of a network using private VLANs. In this scenario, two service providers are each providing multiple services through multiple VLANs over separate uplinks. Customers are subscribed to services from one or both service providers. Each customer's ports are isolated from other customers, but communicate with the ISP or ISPs through the

appropriate uplink port. A single customer may use multiple ports, connected to individual PCs or trunked together to increase bandwidth. If a customer uses multiple ports, these ports are able to communicate with each other.



*On Rapier i and AT-8800 Series switches, private VLANs obsolete protected VLANs and the **protected** parameter of the **create vlan** command. If you run a configuration that uses the **protected** parameter, the VLAN will be converted to a private VLAN.*

Figure 2: Example network configuration using private VLANs

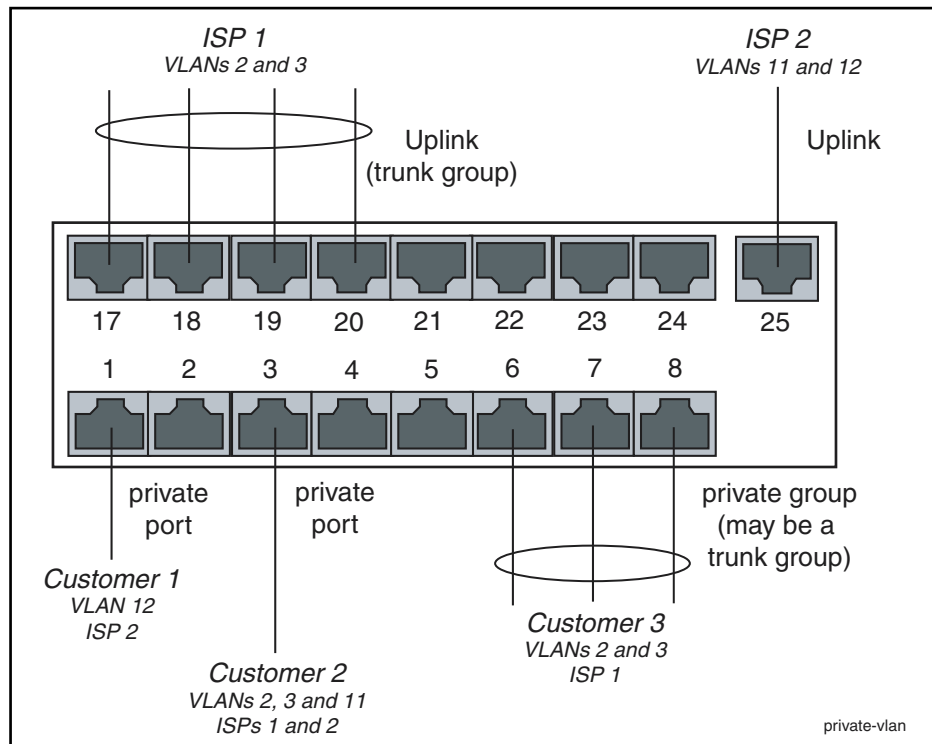

Membership Rules for Private VLANs

Each private VLAN:

- Must contain one uplink port or uplink trunk group
- May contain multiple private ports
- Cannot contain any non-private ports
- Cannot be the default VLAN (vlan1)

Each private port:

- Can be a member of multiple private VLANs
- Cannot be a private port in some VLANs and a non-private port in other VLANs
- Cannot be an uplink port in another VLAN

Each uplink port:

- Can be a member of multiple private VLANs
- Cannot be a member of both private and non-private VLANs

Each private or uplink port:

- May be tagged or untagged, but can only be an untagged member of one port-based VLAN
- May be trunked with other ports of the same type

Private VLANs on Rapier 48i Switches

The ports on Rapier 48i switches are divided into two instances:

- ports 1-24 plus uplink port 49
- ports 25-48 plus uplink port 50

Private VLANs on a Rapier 48i switch can only consist of ports from one instance. Both the private ports and the uplink port must be in the same instance.

Configuring Private VLANs

To create a private VLAN and add ports to it:

1. Create the VLAN

To create a VLAN and specify that it is private, use the command:

```
CREATE VLAN=vlan-name VID=2..4094 PRIVATE
```

2. Add the uplink port or trunk group

To add the uplink to a private VLAN, use one of the commands:

```
ADD VLAN={vlan-name|1..4094} PORT=port-list
[FRAME={UNTAGGED|TAGGED}] UPLINK
```

where *portlist* is either a single port number for a single uplink port, or a list of port numbers for a trunk group. If you are adding a trunk group to the VLAN as an uplink, the ports must already be trunked together, and you must specify all the ports.

3. Add the private ports

To add a private port or ports to a private VLAN, use one of the commands:

```
ADD VLAN={vlan-name|1..4094} PORT={port-list|ALL}
[FRAME={UNTAGGED|TAGGED}] [GROUP]
```

The GROUP parameter specifies that the listed ports may communicate with each other, but not with any other private ports in the VLAN.

To delete ports from a private VLAN:

To delete private ports from a private VLAN, use one of the commands:

```
DELETE VLAN={vlan-name|1..4094} PORT=port-list
DELETE VLAN={vlan-name|1..4094} PORT=ALL
```

A private VLAN cannot contain any private ports when an uplink is deleted from the VLAN, because a private VLAN must always have an uplink. To delete the uplink port or ports and any private ports from a private VLAN, use the PORT=ALL option in the above command.

If the port is a member of a private group, you must delete all ports in the group at once. This stops groups from having different member ports in different VLANs.

Modified Commands

The **create vlan** and **add vlan port** commands have been modified as described below.

```
create vlan=vlan-name vid=2..4094 [private]
```

The **private** parameter specifies that the VLAN is a private VLAN. A private VLAN contains ports or groups of ports that are isolated from the other ports in the VLAN.

```
add vlan={vlan-name|1..4094} port={port-list|all}  
[frame={tagged|untagged}] [uplink] [group]
```

The **group** parameter specifies that the listed ports may communicate with each other, but not with any other private ports in the VLAN, and is only valid for private VLANs. You can add a group of ports to multiple private VLANs, as long as the group contains identical ports in each VLAN.

The **uplink** parameter specifies that the ports are to be added to the VLAN as uplink ports, and is only valid for private VLANs. If more than one port is specified then they must be a trunked group. Each private VLAN can only have one uplink. The port must not be a member of any non-private VLAN except the default VLAN. The ports can only be in another private VLAN if they are the uplink for that VLAN.

If the VLAN is a private VLAN and you do not specify the **uplink** or **group** parameter, then the ports will be added as individual private ports. Private ports cannot be added to a private VLAN until the VLAN has an uplink port or uplink trunk group added to it. The port must not be in any non-private VLANs.

Output of the **show vlan** command has been modified to show whether the VLAN is private or not, and the ports in private VLANs. See Figure 3 on page 22.

Figure 3: Example output from the SHOW VLAN command.

```

VLAN Information
-----
Name ..... default
Identifier ..... 1
Status ..... static
Private VLAN ..... No
Untagged ports ..... 1,3-23
Tagged ports ..... None
Spanning Tree ..... default
Trunk ports ..... None
Mirror port ..... None
Attachments:
Module          Protocol          Format    Discrim    MAC address
-----
GARP            Spanning tree    802.2    42         -
IP              IP                Ethernet  0800       -
IP              ARP                Ethernet  0806       -
-----

Name ..... vlan2
Identifier ..... 2
Status ..... dynamic
Private VLAN ..... Yes
Untagged ports ..... 2,24
Tagged ports ..... None
Spanning Tree ..... default
Trunk ports ..... None
Mirror port ..... None
Attachments:
Module          Protocol          Format    Discrim    MAC address
-----
GARP            Spanning tree    802.2    42         -
-----

Private Uplink:
Uplink ports ..... 21-24

Private Groups:
Group ports ..... 3-5
Group ports ..... 6-9
-----

```

Configuration Example

To create vlan2 with two groups of private ports (3-5 and 6-9) connected to an uplink trunk group (ports 21-24):

1. Create vlan2, making it private.

```
create vlan=vlan2 vid=2 private
```

2. Add the uplink trunk group to the VLAN. The ports must already be trunked together.

```
add vlan=vlan2 port=21-24 uplink
```

3. Define the groups and add their ports to vlan2.

```
add vlan=vlan2 port=3-5 group
```

```
add vlan=vlan2 port=6-9 group
```

Probing IP Addresses

When creating a DHCP range, you can now specify how the DHCP server checks whether an IP address is being used by other hosts by specifying the new **probe** parameter, with the command:

```
create dhcp range=name ip=ipadd number=number policy=name  
[gateway=ipadd] [probe={arp|icmp}]
```

The **probe** parameter specifies how the DHCP server checks whether an IP address is being used by other hosts. If **arp** is specified, the server sends ARP requests to determine if an address is in use. If **icmp** is specified, the server sends ICMP Echo Requests (pings). The default is **icmp**.

To modify the server's method for probing IP addresses, use the new command:

```
set dhcp range=name probe={arp|icmp}
```

Note that **arp** cannot be specified if the range includes a gateway (by specifying the **gateway** parameter when it was created), or if the network uses Proxy ARP.




*Note that **arp** cannot be specified if the range includes a gateway (by specifying the **gateway** parameter when it was created), or if the network uses Proxy ARP.*

For more information, see the *Dynamic Host Configuration Protocol (DHCP)* chapter of the *Software Reference*.

Virtual Bridge (VLAN) MIB

Support has been added for RFC 2674, “Definitions of Managed Objects for Bridges with Traffic Classes, Multicast Filtering and Virtual LAN Extensions” which defines MIB objects for managing IEEE 802.1Q VLANs. Objects defined in this MIB reside in the *mib(1)* sub-tree (Figure 4 on page 24), under the *dot1dBridge* sub-tree defined in RFC 1493, and have the object identifier *qBridgeMIBObjects* ({ *mib-2 dot1dBridge(17) qBridgeMIB(7) 1* }).

Figure 4: The Virtual Bridge (VLAN) sub-tree of the Internet-standard Management Information Base (MIB)

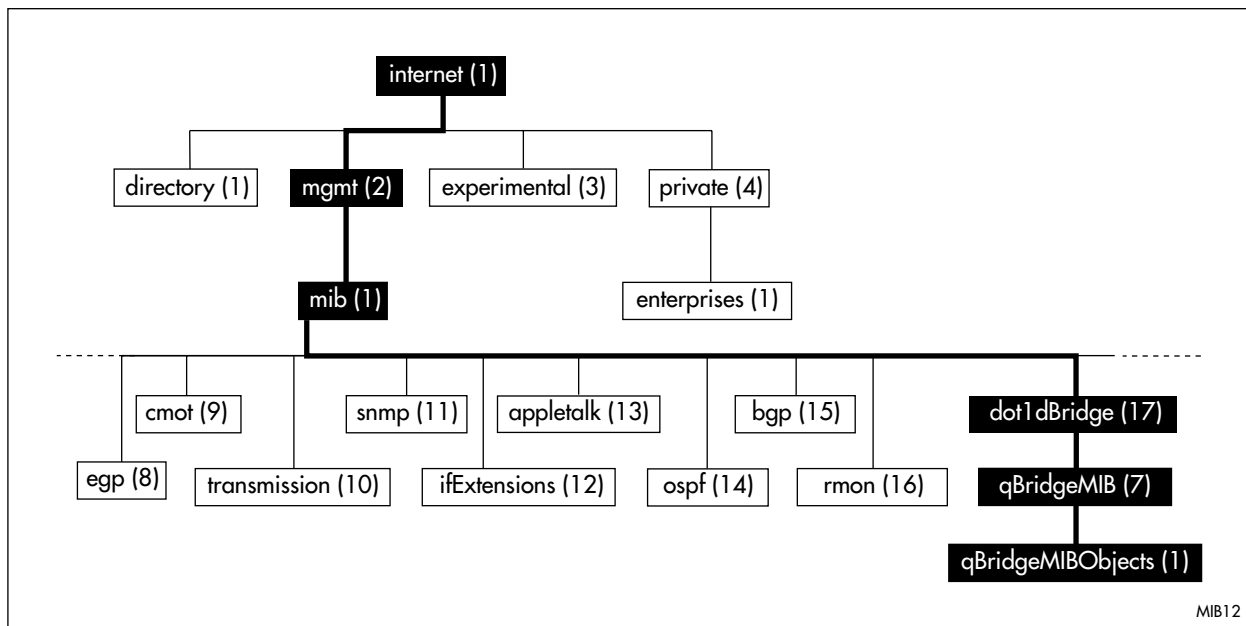

The MIB is organised into four logical groups:

- The *dot1qBase* Group contains general objects that apply to any device that supports IEEE 802.1Q VLANs.
- The *dot1qTp* Group contains objects that describe the operation and status of transparent bridging, including the dynamic filtering databases for unicast and multicast forwarding.
- The *dot1qStatic* Group contains objects that describe static configurations for transparent bridging, including static entries in the filtering databases for unicast and multicast forwarding.
- The *dot1qVlan* Group contains objects that describe the configuration and status of VLANs, including statically configured VLANs and VLANs configured dynamically by protocols like GVRP.

The following objects are implemented:

- All objects in the *dot1qBase* Group.
- The *dot1qVlanNumDeletes* object in the *dot1qVlan* Group.
- The *dot1qVlanCurrentTable* object in the *dot1qVlan* Group.
- The *dot1qVlanStaticTable* object in the *dot1qVlan* Group.
- The *dot1qNextFreeLocalVlanIndex* object in the *dot1qVlan* Group.
- The *dot1qPortVlanTable* object in the *dot1qVlan* Group.

Valid Values for IPv6 Router Advertisement *AdvRetransTimer*



This enhancement is available on AT-8800, Rapier, and Rapier i Series switches.

The value you enter for the AdvRetrans timer is now rounded up to the nearest 100 milliseconds (for example, 301 becomes 400). The AdvRetrans timer is the interval between repeats of each Router Advertisement message sent by the switch, and is specified by using the **retrans** parameter in the command:

```
set ipv6 nd interface=interface retrans=0..4294967295
[other-parameters]
```

The default is 0, which indicates that this timer is not specified.

For more information, see the *Internet Protocol Version 6 (IPv6)* chapter of the *Software Reference*.

Valid Characters for File Names - Show File and Delete File Commands

For the **show file** and **delete file** commands only, the characters * > [] | : can now be specified in the filename.

Files are uniquely identified by a file name in the format:

```
[device:] filename.ext
```

■ *filename* is a descriptive name for the file, and may be one to twenty eight characters long. Invalid characters are " \ ; ? / , < . Valid characters are:

- uppercase and lowercase letters
- digits (0–9)
- the characters ~ ' ! @ # \$ % ^ & () _ - { } * > [] | :

Wildcard characters * may appear anywhere in the filename. The wildcard character matches any string.

Character ranges may be specified using the > character, for example a>z matches any letter in the alphabet. The + character may be used to specify a list of options, for example a*.scp+b*.scp would specify files that match a*.scp or b*.scp.

Square brackets may be used, for example ppp*.[scp+cfg] matches scripts and configuration files whose names start with "ppp".

The vertical bar | character matches any single character. For example, | | |.scp matches script files with names three characters long (excluding extension and device name).

If a colon is seen anywhere in the filename, the device parameter is ignored and it is assumed that the filename includes the device name.

Extended Show Debug Command

The command **show debug** displays the output of a list of other **show** commands. A **full** parameter has been added and displays a longer list of commands:

```
show debug [stack|full]
```

The output also depends on the switch's security mode and the user's privileges. The possible command list variations are given in Table 5 on page 26.

The **stack** parameter limits the output to a stack dump, if one is available. The output depends on whether the last fatal condition was a hardware reset or a software reboot. After a software reboot, the output is a stack dump. After a hardware reset, no stack dump information is available and a message to this effect is displayed. If the **stack** parameter is not specified, both a stack dump if available and the output of a list of **show** commands is generated.

Table 5: The list of **show** commands that are executed by the **show debug** command, when the **full** parameter is or is not specified, under different combinations of security mode and privilege level

Full parameter specified?	Security mode	Privilege level	List of commands executed
No	normal	manager	show system
No	secure	security officer	show files show install show feature (AR400, AR700, AT-8800, Rapier and Rapier i series) show release show config dynamic show buffer scan show cpu show log show exception show ffile check
No	secure	manager	show system (without current configuration file) show files show install show release show buffer scan show cpu show log show exception show ffile check

Table 5: The list of **show** commands that are executed by the **show debug** command, when the **full** parameter is or is not specified, under different combinations of security mode and privilege level (Continued)

Full parameter specified?	Security mode	Privilege level	List of commands executed
Yes	normal	manager	show system
Yes	secure	security officer	show files show install show feature (AR400, AR700, AT-8800, Rapier and Rapier i series) show release show config dynamic show interface show ip interface show ip arp show ip route full show ip count show switch (AR400, AT-8700XL, AT-8800, Rapier and Rapier i series) show switch counter (AR400, AT-8700XL, AT-8800, Rapier and Rapier i series) show switch fdb (AR450, AT-8700XL, AT-8800, Rapier and Rapier i series) show startup show flash show switch port=all (AR400, AT-8700XL, AT-8800, Rapier and Rapier i series) show switch port=all counter (AR450, AT-8700XL, AT-8800, Rapier and Rapier i series) show buffer scan show cpu show log show exception show ffile check

Table 5: The list of **show** commands that are executed by the **show debug** command, when the **full** parameter is or is not specified, under different combinations of security mode and privilege level (Continued)

Full parameter specified?	Security mode	Privilege level	List of commands executed
Yes	secure	manager	show system (without current configuration file) show files show install show release show interface show ip interface show ip arp show ip route full show ip count show switch (AR400, AT-8700XL, AT-8800, Rapier and Rapier i series) show switch counter (AR400, AT-8700XL, AT-8800, Rapier and Rapier i series) show switch fdb (AR450, AT-8700XL, AT-8800, Rapier and Rapier i series) show startup show flash show switch port=all (AR400, AT-8700XL, AT-8800, Rapier and Rapier i series) show switch port=all counter (AR450, AT-8700XL, AT-8800, Rapier and Rapier i series) show buffer scan show cpu show log show exception show ffile check

Extended Syslog Format

A new parameter, **syslogformat**, has been added to the **create log output** and **set log output** commands:

```

create log output={temporary|permanent|output-id}
  destination={email|memory|asyn|router|syslog}
  [syslogformat=extended|normal] [other-parameters...]

set log output={temporary|permanent|output-id}
  [syslogformat=extended|normal] [other-parameters...]

```



*The **permanent** option for the **output** parameter is not available on AT-8600 Series switches.*

The **syslogformat** parameter specifies whether or not the log messages sent to the syslog server contain the date, time and system name. If the parameter is set to **extended** the date, time and system name are included. If the parameter is set to **normal** the date, time and system name are not included in the syslog message. This parameter is only valid if **destination** is **syslog**. The default is **normal**.

Table 6: Examples of syslog messages with **syslogformat=normal**

```
<12>SSH:SSH/ACPT, SSH connection accepted - pwduser
<14>CH:CMD/USER, logoff
<12>USER:USER/LOFF, pwduser logoff on TTY17
```

Table 7: Examples of syslog messages with **syslogformat= extended**

```
23-Oct-2003 16:39:37 <12>SSH:SSH/ACPT, Src: AR450 ,SSH connection accepted - pwduser
23-Oct-2003 16:39:41 <14>CH:CMD/USER, Src: AR450 ,logoff
23-Oct-2003 16:39:41 <12>USER:USER/LOFF, Src: AR450 ,pwduser logoff on TTY17
```

To set the system name to a unique identifier, use the command **set system name**.

TACACS+ Authentication and Telnet

If your login to the switch is authenticated using TACACS+, you can only use outbound telnet if your TACACS+ privilege level is also equal to or higher than the minimum TACACS+ privilege level required for using telnet on the device. By default, no TACACS+ users can telnet from the switch. To set a privilege level, use the command:

```
set tacplus telnet={0..15|none}
```

A value of **none** is the default and disables telnet for all TACACS+ authenticated users. A value of **1** indicates that all users can telnet. TACACS+ privilege levels of 1-6 correspond to User level privilege, privilege levels 7-14 are mapped to Manager, and privilege level 15 are mapped to Security Officer. Therefore a value of **7-14** indicates that Manager privilege or better is required. A value of **15** is equivalent to Security Officer privilege.

Note that a user can have a TACACS+ privilege level that is equivalent to User or Manager but be unable to use telnet on the device if the TACACS+ privilege level required for using telnet is higher than the privilege level they have been assigned. For example, if the TACACS+ privilege level required for using telnet is set to 10 and there are two users with Manager privileges, one with a TACACS+ privilege level of 9 and one with a privilege level of 10, only the user with a privilege level of 10 can use telnet on the device.

For example, to allow telnet for TACACS+ authenticated Security Officers, use the command:

```
set tacplus telnet=15
```

To see the required privilege level, use the command:

```
show tacplus telnet
```

Figure 5: Example output from the **show tacplus telnet** command.

```
TACACS+ telnet privilege level: NONE
```

Table 8: Parameters displayed in the output of the **show tacplus telnet** command.

Parameter	Meaning
TACACS+ telnet privilege level	The level of TACACS+ privilege required for using telnet on the switch; a number in the range 0 to 15, or none . None indicates that no TACACS+ authenticated user can use telnet.

Adopting the VRRP IP Address

Benefits of VRRP IP Address Adoption

The VRRP master router can *adopt* the IP address of the virtual router (VR), and respond to the following packets destined for the VR IP address, even if it does not own this IP address on any of its interfaces:

- ICMP echo requests (pings)
- Telnet and SSH connection requests
- HTTP and SSL GUI management requests
- SNMP requests, and
- DNS relay requests

VRRP IP Address Adoption allows continuous accessibility of the VR IP address even as the VR master changes. Using this feature:

- You can easily tell whether the VR is functioning, by pinging the single VR IP address.
- You can easily monitor the performance of the VR, regardless of which participating router is acting as master.
- DNS relay can continue functioning via the same IP address at all times.

Risks of VRRP IP Address Adoption

When VRRP IP Address Adoption is used, the master router accepts packets destined for the virtual router, even though it may not own this IP address. This does not conform to RFC 2338. Because the same IP address refers to different devices at different times, there is a risk of confusion arising. This risk can be reduced by a suitable network management policy.

Recommendations

Before using VR IP address adoption, consider the following guidelines to avoid confusion:

- Ensure that the VR has an IP address that is different from the interface IP addresses of any of the individual routers in the VR.
- Ensure that all routers in the virtual router use VRRP IP Address Adoption (or that none do).
- Use the VRRP IP address to monitor the VR master. Be aware that this does not give information about one particular participating router, but about the current VR master, whichever participating router is acting as the master at the time.

- When changing the configuration of the participating routers using Telnet, GUI or SNMP, configure each device individually by pointing to their individual IP addresses.
- When changing the configuration of the participating routers, do not use the VR IP address. Only one device, the VR master, is responding to this IP address, and you may not know which device it is.

Configuration of VR IP Address Adoption

To configure VRRP IP Address Adoption, use the new parameter, **adoptvrip**, that has been added to the **create vrrp** and **set vrrp** commands:

```
create vrrp=vr-identifier over=physical-interface
    ipaddress=ipadd [adoptvrip={on|off}]
    [other-parameters...]

set vrrp=vr-identifier [adoptvrip={on|off}]
    [other-parameters]
```

The **adoptvrip** parameter specifies that when the switch is acting as the VRRP master it should respond to requests directed at any IP address that it is backing up, even if it does not own that address. If it does not own the address the access requests that the switch will permit are limited to: ICMP echo requests (pings), Telnet, SSH, HTTP and SSL GUI, SNMP and DNS relay. All other types of access to the address will be ignored. The default is OFF.



*If you set **adoptvrip** to on, give the VR an IP address that is different from the interface IP addresses of any of the individual routers in the VR, and only use the VR IP address to monitor the VR, not to configure any of its participating routers. Otherwise you risk confusion when you monitor or configure individual routers. See [Synchronising Time Across Stacks](#) on page 9 for more about risks and recommendations.*



Configure all the switches in a virtual router with the same values for the VRRP virtual router identifier, IP address, adopt VR IP address mode, advertisement interval, preempt mode, authentication type and password. Inconsistent configuration will cause advertisement packets to be rejected and the virtual router will not perform properly.

To display the value of the new parameter, use the **show vrrp** command.

Table 9: New parameter displayed in the output of the **show vrrp** command

Parameter	Meaning
Adopt VR IP Address(es)	Whether or not the switch should respond to ICMP echo, Telnet, GUI, SNMP and DNS relay service requests targeted at the VR IP address(es) associated with the virtual router, even if it does not own those address(es).

BCP Option 8



This enhancement is available on Rapier and Rapier i Series switches.

This enhancement implements support for Bridge Control Protocol (BCP) Option 8 (IEEE 802 Tagged Frames). The Bridging Control Protocol (BCP) is responsible for configuring the bridge protocol parameters on both ends of the point-to-point link.

By default, BCP Option 8 is not supported.

To enable BCP Option 8 negotiation with the Peer at the other end of the bridge, use the command:

```
enable bridge tagged
```

To disable BCP Option 8, use the command:

```
disable bridge tagged
```

For more information about Remote Bridging, see the *Bridging* chapter of the *Software Reference*.

Firewall Enhancements



These enhancements are available on AT-8800, Rapier, and Rapier i Series switches.

ICMP protocol for firewall policy rule

A new option has been added to the **add firewall policy rule** and **set firewall policy rule** commands. **Icmp** (Internet Control Message Protocol) can now be specified as a **protocol** parameter option for rules with **action=nat** or **action=nonat**. To specify **icmp**, use the commands:

```
add firewall policy=policy rule=rule-id action={allow|deny|
nat|nonat} interface=interface protocol={protocol|all|egp|
gre|icmp|ospf|sa|tcp|udp} [other-parameters...]

set firewall policy=name rule=rule-id [protocol={protocol|
all|egp|gre|icmp|ospf|sa|tcp|udp}] [other-parameters...]
```

For more information, see the *Firewall* chapter of the *Software Reference*.

Debug and display firewall ARP requests

A new option has been added to the **disable firewall policy** and **enable firewall policy** commands. **Arp** can now be specified as a **debug** parameter. This option enables or disables the display of all ARP requests that have passed through the firewall.

To specify **arp**, use the commands:

```
enable firewall policy=name [debug={all|arp|http|packet|
pkt|process|proxy|smtp}] [other-parameters...]
disable firewall policy=name [debug={all|arp|http|packet|
pkt|process|proxy|smtp}] [other-parameters...]
```

A switch that is also acting as a NAT device will now respond to ARP requests for any of its global IP addresses.

A new command, **show firewall arp**, displays information about IP addresses specified in Firewall NAT configurations for which ARP responses from the switch may be required. To display this information, use the command:

```
show firewall arp [policy=name]
```

The **policy** parameter specifies a firewall policy and displays IP addresses for NAT configurations with that policy. If this parameter is not specified, IP addresses are displayed for all policies.

An example output and the parameter descriptions for the **show firewall arp** are shown below.

Figure 6: Example output from the **show firewall arp** command

IP (range)	ARP Interfaces Policy	NAT Type	Int	Gbl Int	Rule
172.20.8.50	Public Office	Int based	eth0-0	eth1-0	-
172.20.8.57 -172.20.8.62	All Public LAN	Rule	eth0-1	-	1

Table 10: Parameters in the output of the **show firewall arp** command

Parameter	Meaning
IP (range)	An IP address or range for which the switch may be required to send ARP responses.
Policy	The name of the policy whose NAT configuration the IP address (range) belongs to.
ARP Interfaces	Interfaces in the policy on which ARP requests are permitted: Public - ARP requests are permitted on the public interface specified by the Gbl Int parameter All Public - ARP requests are permitted on all of the policy's public interfaces Private - ARP requests are permitted on the private interface specified by the Int parameter All Private - ARP requests are permitted on all of the policy's private interfaces An address in an ARP request must match the subnet of the interface on which the ARP request is received.

Table 10: Parameters in the output of the **show firewall arp** command (Continued)

Parameter	Meaning
NAT Type	The type of NAT configuration associated with the IP address: Int Based - The address (range) was specified by an interface-based NAT configured with the add firewall policy nat command Rule - The address (range) was specified by a NAT rule configured by the add firewall policy rule command, where the ACTION parameter was specified as NAT
Int	The private interface associated with the NAT configuration. If the NAT Type is Int based, this is the private interface specified by the INTERFACE parameter in the add firewall policy nat command. If the NAT Type is Rule, this is the interface to which the rule is attached. If this is a private interface, a dash indicates that the rule is attached to a public interface (see the Gbl Int parameter).
Gbl Int	The public interface associated with the NAT configuration. If the NAT Type is Int based, this is the public interface specified by the GBLINTERFACE parameter in the add firewall policy nat command. If the NAT Type is Rule, this is the interface to which the rule is attached. if this is a public interface, a dash indicates that the rule is attached to a private interface (see the Int parameter).
Rule	The number of the rule associated with this entry. When the NAT Type is Int based, no value is displayed.

For more information, see the *Firewall* chapter of the *Software Reference*.

